Read, understand, and follow all instructions and warnings in this manual before operating this Grill.

This Grill is for outdoor use only.

This Grill is for use with the BioLite CampStove only. Please read all CampStove Instructions prior to use.

Metal surfaces will be hot when Grill is operating and present a burn hazard.

Follow all local fuel collection and fire-making regulations. Cooking and fire policies vary from season to season and park to park. Only you can prevent forest fires.

Thank you for purchasing a

BioLite Portable Grill.

The information contained in this instruction manual as well as videos to help clarify operation are available on our website.

http://www.biolitestove.com/support

for product and service inquiries, contact:

BioLite
P.O. Box 21905, Brooklyn, NY 11201 USA
909-BL-STOVE
support@biolitestove.com
www.biolitestove.com

GRL.R0.IM.EN

instruction manual

BioLite Portable Grill

anatomy of your Grill

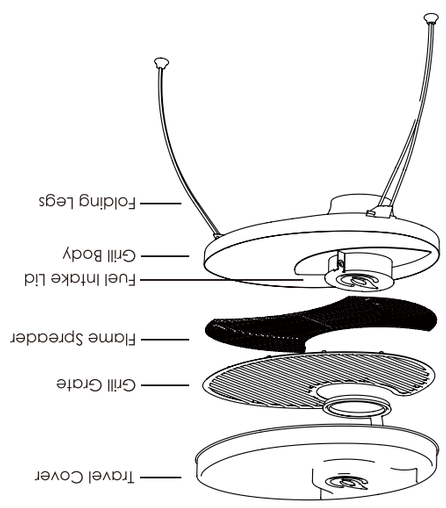

specifications

Weight	1.83 lbs/ .83kg
Dimensions	9.5 x 12 x 3.5 in [folded] 9.5 x 12 x 10.5 in [unfolded]
Cooking Area:	55 in² / 355 cm²

maintenance

cleaning

- Grill body, Flame Spreader, and Grill Grate can be cleaned with warm soap and water. Dry immediately after cleaning. If necessary, use a scouring sponge for stubborn grease.

storage

- Keep out of reach of children
- Store in dry place
- Keep Travel Cover on
- Please note it is normal for some discoloration to occur with regular use of the Grill. However, to minimize oxidation, always keep Grill dry after use and cleaning.

⚠ DANGER

CARBON MONOXIDE, EXPLOSION, FIRE, AND BURN HAZARD

CARBON MONOXIDE HAZARD. This Grill is for **OUTDOOR USE ONLY**, never for use in tents, vehicles, indoors, or other places without fresh air. Carbon Monoxide inhalation can cause death or brain damage. Carbon Monoxide (CO) is produced when fuel burns.

EXPLOSION - FIRE HAZARD. This Grill is not during use and is intended to be used in conjunction with the CampStove burning solid biomass (e.g. wood, pinecones, etc) only. **NEVER add liquids, gels, plastics, or other accelerants into stove.** This Grill is not during use and can ignite flammable materials too close to the flame. Keep flammable materials at least 18 inches from the sides and 48 inches from the top of the Grill. Keep gasoline and other flammable liquids and vapors well away from the Grill. Clean Grill frequently to avoid grease accumulation and possible grease fires. Never leave Grill unattended.

BURN HAZARD. Metal surfaces on the Grill will be hot when Grill is operating and present a burn hazard. Handle Grill when sufficiently cooled or using protective heat-resistant outerwear only. Flames may be large. Never leave Grill unattended when hot or in use. Do not move stove and Grill while lit. Keep out of reach of children. Always use on level, non-flammable ground.

READ, UNDERSTAND, AND FOLLOW ALL instructions and warnings in this manual before operating this grill.

Failure to comply with the precautions and instructions provided with these grills can result in property loss or damage, serious bodily injury, or death. Only persons who can understand and follow the instructions should use this grill. Contact BioLite with any questions about safety or operation.

BIOLITE PORTABLE GRILL LIMITED WARRANTY INFORMATION

BioLite has a 1-year limited warranty. Should this product not function properly under normal use within 1 year of purchase, contact BioLite or your local distributor for return process information. BioLite alone will determine if the problem is due to a manufacturing flaw. If so, BioLite will repair or replace the unit at its discretion and return it to you, free of charge.

This warranty does not cover any damage or malfunction arising from misuse, improper maintenance, negligence, normal wear and tear, or accident. The Portable Grill may only be used in conjunction with the BioLite CampStove. Never alter the Grill in any way or use with any part or accessory not expressly approved by BioLite. This warranty applies only to the original purchaser and proof of purchase is required.

All implied warranties required under law are limited to one year. BioLite shall not be liable for any consequential or incidental damages whatsoever. BioLite shall not be held liable if the product or defect herein causes damage to or failure of other equipment.

This warranty gives you specific legal rights. You may also have other rights that vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitation or exclusion of implied warranties, so the above exclusions or limitations may not apply to you.

0 at home

BEFORE FIRST USE OF THIS PRODUCT, please familiarize yourself with the BioLite Portable Grill and its component parts.

The BioLite Grill is comprised of 6 key parts: the Grill Body, Grill Grate, Flame Spreader, Fuel Intake Lid, Folding Legs, and Travel Cover. Never have Travel Cover on Grill when operating the Grill. All other components must be used for proper operation of the Grill.

⚠ WARNING

The BioLite Grill is ONLY intended for specific use with the BioLite CampStove. Any other use of the BioLite Grill is strictly prohibited. Use of the BioLite Grill with any other product, or for non-approved applications, may cause poor product performance and can cause serious personal injury, property damage, or death. Refer to the instructions that came with your BioLite CampStove for information on how to safely operate your BioLite CampStove. These instructions can also be found here at www.biolitestove.com/faq/instructions

1 setup

1. **Place BioLite CampStove on level ground away from any overhanging branches.** Clear away dry brush on the ground around the stove. Have water handy in case of accident.
2. **Refer to BioLite CampStove Instruction Manual** for safe firestarting.
3. Once CampStove is lit, **extend Folding Legs of Grill and place circular base over CampStove.**
4. **Release folding position** by pressing upper region of Folding Legs until locked into standing position. Ensure Grill Body is sitting away from the Power Module.

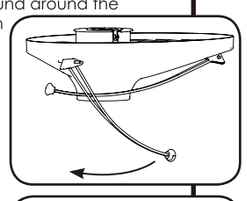

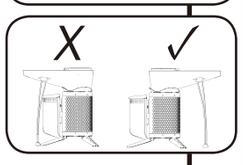

CAUTION

CampStove will be lit and hot. Carefully place the Grill over the CampStove.

2 cook

Note: "fuel" refers to solid biomass, e.g. wood, pine cones, etc., **never use liquid fuels or charcoal.**

1. **Wait 5-10 minutes for Grill to heat up** after being placed on lit CampStove. Refer to CampStove Instruction Manual for information about optimizing fire.
2. **Place food on top of Grill with tongs or other durable heat-resistant utensil.** DO NOT place with bare hands as this may create a burn hazard.
3. **Once you have reached desired flame intensity, close Fuel Intake Lid using a heat-resistant utensil** to distribute flames into Grill Body. Cook food according to specified cooktimes.
4. **To re-fuel while cooking, lift the lid using a heat-resistant utensil and place solid biomass directly into fuel chamber.** You do NOT need to move the Grill or your food to restoke the fire. Do not over-load chamber as this will cause smoke. For best grilling, create a medium-sized fire and have the fan on LO setting.

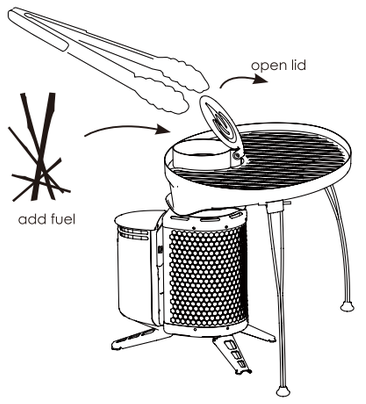

⚠ WARNING

FUEL INTAKE LID AND GRILL WILL BE HOT. Always use a heat resistant utensil of sufficient length to open or close the fuel lid and to place food on top of the Grill so as to maintain a safe distance between your hand and Grill. Metal surfaces of the CampStove will also be hot. While Stove is hot or running, only touch plastic parts.

cook [continued]

1. **ONLY PLACE FOOD ON TOP OF GRILL.** Do not place pans, pots, or other cookware on top of the Grill.
2. For searing and high-heat cooking, place foods on area closest to flame by Fuel Intake Lid. For medium-heat cooking, place on lower region of Grill
3. **Intensity of heat** of Grill can be controlled by leaving Fuel Intake Lid open until flame burns down.
4. **Due to exposure to extreme heat, it is normal for discoloration of Grill to occur after use and will not affect performance.**

Temperature Regions

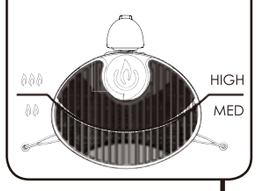

⚠ WARNING

Exercise extreme caution when moving food or adding fuel as Grill and its contents are hot. **CAUTION** when cooking with high-fat or oily foods as these may cause flareups.

3 shut down & cleaning

1. **Refer to the BioLite CampStove Instruction Manual for the shutdown procedure for the CampStove.**
2. **Wait at least 10 minutes after fire has completely burned out before handling Grill attachment.** DO NOT remove while fire or embers are still active in CampStove.
3. **Remove Grill from CampStove** and fold Legs inward as pictured.
4. **Place Travel Cover** over top and bottom opening of Grill for easy portability without mess. Grill must be completely cooled before applying Travel Cover.
5. **To clean on-site**, wipe down cooled grill with a damp rag. Clean thoroughly with wire brush when available. Dry thoroughly after cleaning.

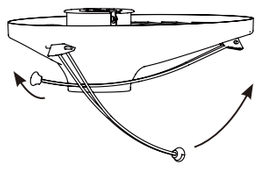

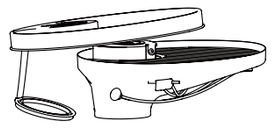

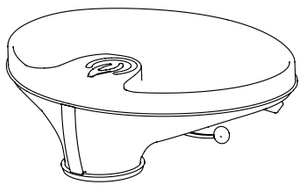

⚠ WARNING

DO NOT remove Grill while fire or embers are still active in CampStove as this can create a burn hazard. When dumping embers, remember to extinguish them because live embers can start fires.

NOTICE

To protect stove and Grill's components, never pour water into Grill **- NEVER.** Exposure to extreme temperature changes via water can damage Grill.

& tips for use

1. To charge a device, follow CampStove Instructions. **NOTICE: Always keep the power module upwind and away from the Grill.**
2. **NOTICE:** It is also recommended to keep devices being charged away from Grill to prevent drippings or grease from coming into contact with electronics.
3. For hottest and most efficient fire, make sure that there is space between the pieces of wood, the holes on the side of the fuel chamber are not blocked, and all wood is entirely inside the fuel chamber.
4. To avoid excessive smoking, use small twigs to restart a fire from embers.

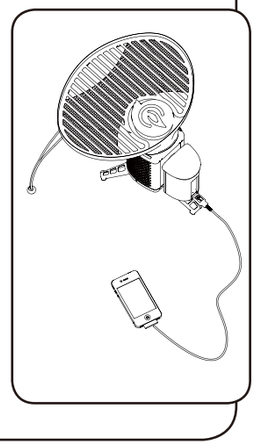

operating instructions